

Mounting instructions 71 KPF :

1. Mark the position on the door-leaf and frame according to hole-pattern.
Make sure that the holes is centered, in relation to each other.


Drill Ø22 mm for fitting (1+1)
and holes for screws (2+2).

2. Mount the frame bridge, return spring [A] and eccentric locks [B] (2x) on the cable.
3. Mount the frame bridge in door and frame. Tighten the screws.
4. Check the function of the frame bridge. If necessary, adjust the stroke-length of the return spring.

Package contains:

Frame bridge 71 KPF
Return spring
Eccentric lock (2 pcs.)
Screws for mounting (4 pcs.)

Art.No: 471014871

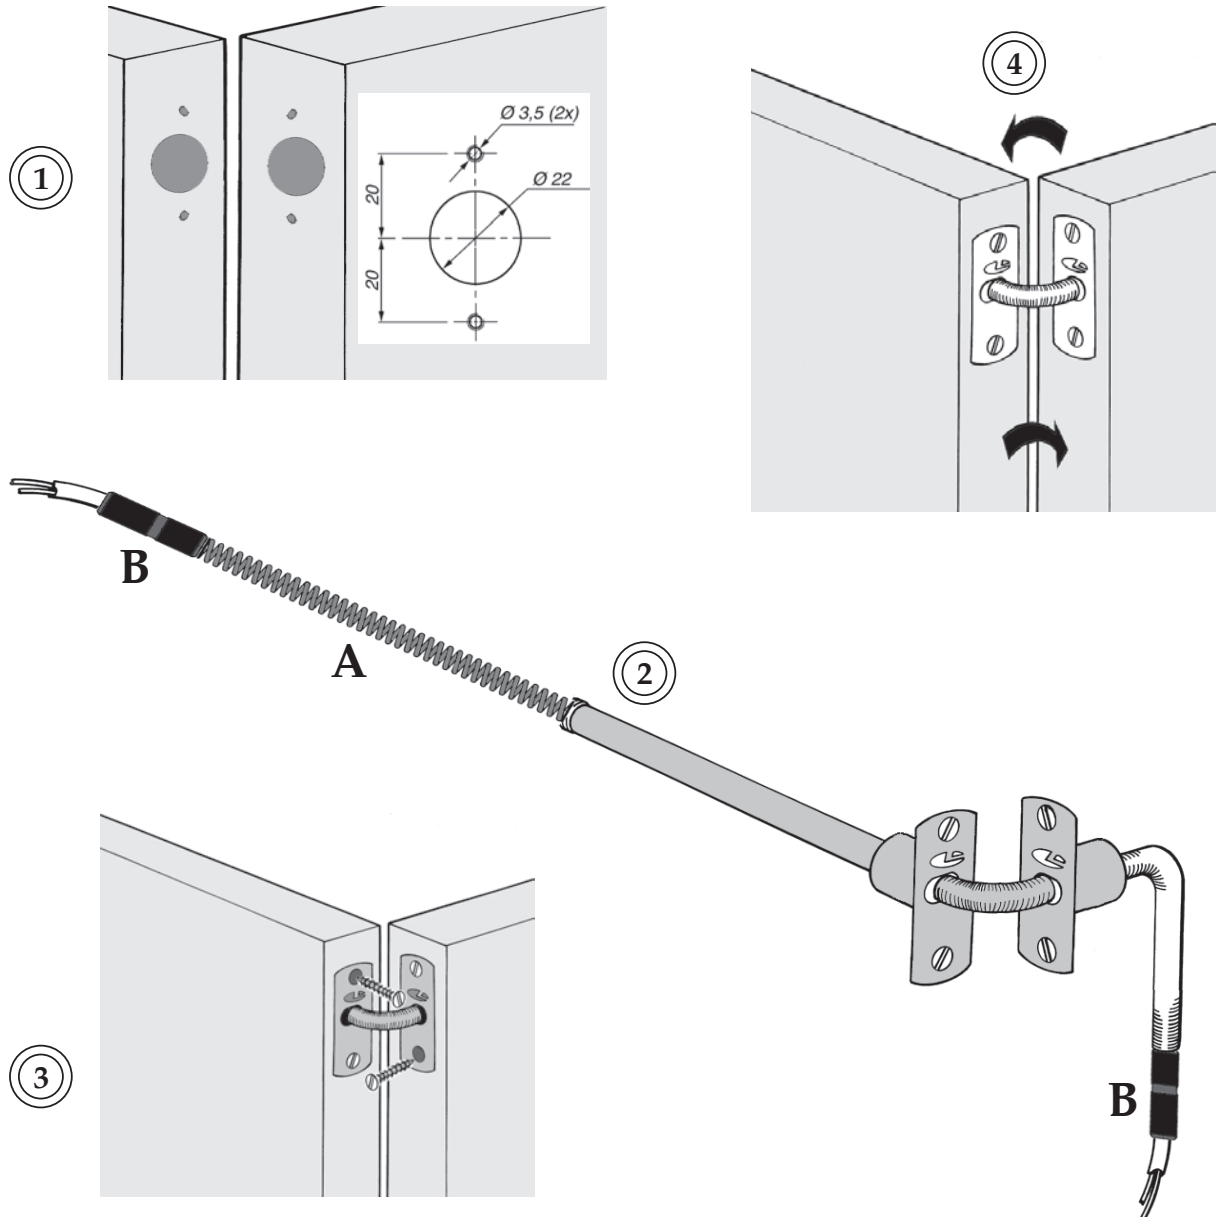

OLDA 71 KPF- frame bridge - drawing

